



All products are trademarks of Nostalgia Products Group, LLC.
Worldwide design & utility patented or patents pending.
© 2013 Nostalgia Products Group, LLC.

www.nostalgiaelectrics.com

(rev. 08/23/13)



HCC360

Hollow Chocolatier

Instructions and Recipes



Make every day a party!
Visit www.nostalgiaelectrics.com for more fun products.

CONTENTS

IMPORTANT PRECAUTIONS 3

IMPORTANT SAFEGUARDS 3

INTRODUCTION 4

PARTS & ASSEMBLY 5

HOW TO OPERATE 6

HELPFUL TIPS 6

CLEANING & MAINTENANCE 7


RECIPES 8

RETURNS & WARRANTY 11

SAFETY

Your safety and the safety of others is very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

Appliance Specifications:
Chocolate pot: 120 Volts, 60 Hz, 70 Watts, ETL Approved
Chocolatier: uses one 9volt battery (not included)

IMPORTANT PRECAUTIONS




1. NEVER immerse appliance or cord in water.
2. NEVER use near water.
3. NEVER use an abrasive sponge or cloth on the appliance.
4. NEVER leave appliance unattended while in use.
5. NEVER place anything other than what is intended to be cooked in the appliance.
6. Unplug appliance from outlet when not in use and when cleaning.
7. DO NOT place appliance in dishwasher.
8. Keep out of reach of children.
9. This appliance is NOT A TOY.
10. This appliance is not intended for use by young children or the cognitively challenged without supervision.
11. Young children should be supervised to ensure that they do not play with the appliance.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including:

1. **Read all instructions before operating this appliance.**
2. DO NOT touch hot surfaces.
3. DO NOT use outdoors. FOR HOUSEHOLD USE ONLY.
4. To protect against risk of electrical shock, do not immerse cord, plug or Heated Base in water or any other liquid.
5. DO NOT operate any appliance with a damaged cord or plug, after the appliance malfunctions, or if it is dropped or damaged in any manner. Return the appliance to the nearest authorized service facility for examination, or to a repair shop for electrical or mechanical adjustment.
6. The appliance manufacturer does not recommend the use of accessory attachments other than what is supplied with the unit. They may cause injuries.
7. Close supervision is necessary when any appliance is used by or near children.
8. DO NOT place on or near a hot gas or electric burner, or in a heated oven.
9. DO NOT overload wall outlet, extension cords, or integral convenience receptacles, as this can result in a risk of fire or electric shock.
10. This appliance should not be used for purposes other than stated in the instructions accompanying this appliance.
11. DO NOT leave unit unattended while in use or when plugged into an outlet.
12. Unplug from outlet when not in use and before removing parts for cleaning. Allow to cool before putting on or taking off parts and before cleaning the appliance.
13. A short power-supply cord is provided to reduce the risk resulting from

becoming entangled in or tripping over a longer cord. Do not let cord hang over edge of table, countertop or touch hot surfaces.

14. Always plug cord into wall outlet before operation. There is no on/off switch. To turn off, remove plug from wall outlet. Allow unit to cool completely before putting away.
15. Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use. **Exception:** An extension cord or longer detachable cord is not recommended for use with this appliance.
16. If a long detachable power-supply cord or extension cord is used: 1) The marked electrical rating of the cord or extension cord should be at least as great as the electrical rating of the appliance; 2) If the appliance is of the grounded type, the extension cord should be a grounding 3-wire cord; and 3) The longer cord should be arranged so that it does not drape over the countertop or table top where it can be pulled on by children or tripped over unintentionally.
17. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug is intended to fit into a polarized outlet only one way. **If plug does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.**
18. Extreme caution should be used when moving an appliance with hot food.
19.  During use, the appliance is very hot and remains hot for some time after being turned off. DO NOT touch hot surfaces like the Heated Base.
20.  Keep hands and face away from the opening of the Fondue Pot. DO NOT put anything other than the included Fondue Forks or appropriate metal utensils into the hot fondue.
21.  NEVER put fingers or plastic utensils into the hot fondue.
22. Do not attempt to service this appliance yourself, as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

SAVE THESE INSTRUCTIONS!

INTRODUCTION

Thank you for purchasing the HOLLOW CHOCOLATIER from Nostalgia Electrics! Making delightful hollow chocolate candies right at home has never been easier; Simply fill the mold with melted chocolate and the flashing, color-changing lights will illuminate your candy creation! (9-Volt Battery Not Included)

Your HOLLOW CHOCOLATIER includes:

- 7 candy molds to make various
- A chocolate-melting pot
- Spatula/ Knife for detail work
- Injector for decorating or infusing
- 25 pieces of double-sided red/silver foil

PARTS & ASSEMBLY

Parts




Also includes:


25 pieces of double-sided decorative foil

1 injector

1 spatula/knife

HOW TO OPERATE

1. Before first use, wipe all parts with a damp, non-abrasive cloth and dry thoroughly. Be very careful to not get any water in the heated base, or unit will not function.
2. Find a dry, heat-resistant, level surface near an electrical outlet.
3. Place the removable pot in the main unit and plug in the appliance. The power light will come on when appliance is plugged in. Allow unit to preheat for about 7 minutes.
4. Using your own recipe or following recipes included in this instruction manual, prepare your chocolate mixture, or add up to 16 oz. of chocolate to the pot.
5. Be very careful not to overfill the pot. **DO NOT exceed maximum capacity, which is about 2 cups.**
6.  Steam may be released from food during cooking. For your safety, avoid contact with steam, as it is very hot and can cause burns.
7. Be careful to watch the pot and stir mixture if necessary. DO NOT let mixture boil over, as this could cause burns.
8. While the chocolate is heating, insert one 9-volt battery into the Chocolatier. To do this, press in the plastic tab on the left underside of the unit to remove the base and reveal the battery compartment. After locking the base back into place, unlock the top half of the center ring by turning it counterclockwise, so that the mold can be placed in after it is filled.
9. When mixture is ready to use, pour into half of the mold of your choice (see Helpful Tips section for mold-specific suggestions).

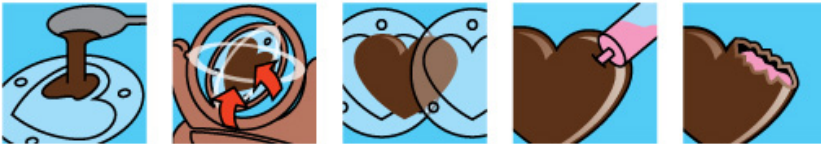

10. Seal mold and place in the center ring. Replace the other half of the center ring and turn it clockwise to lock mold in place. Press the "II" switch. The HOLLOW CHOCOLATIER will rotate and flash its color-changing lights as it spins the mold to form the shape of your choosing.
11. When the chocolate has covered the mold, turn the unit off and unlock the mold and place it in the freezer. Let the chocolate harden for about 30 minutes and gently remove from mold.
12. Once candy has been removed, you can use the knife/spatula to trim the edges or add detail. You can also add decorations on the outside or filling on the inside with the injector.
13. If using the injector to fill candy with your favorite cream, jelly or other liquid, make a small hole in the candy with a fork. Use the injector with the filling of your choice, then use the spatula/knife tool to patch the hole with your remaining chocolate in the melting pot.
14. Replace candy in the freezer until patch has hardened. The included foils can also be used to wrap candies after they are hardened.
15. As soon as you are finished with the chocolate pot, unplug appliance and allow to cool. **BE CAREFUL**, as base and pot will still be hot.
16. Once you are finished with the chocolate and the appliance is cool, empty remaining heated mixture into a bag or trash receptacle and follow the directions in the Cleaning & Maintenance section to clean your HOLLOW CHOCOLATIER.

HELPFUL TIPS



NEVER leave the unit unattended while operating.

- Use the included spatula/knife to shave edges and refine shapes. The injector not only fills candies, but can be used to decorate the outside of pieces.
- For colored chocolates, melt down white chocolate and add food dye.
- For a thinner candy shell, fill less of the mold, relative to its size. Filling the 4-in-1 mold to the very top, for example, will create a very thick shell due to the small size of the individual molds.
- For a thicker shell in any of the molds, fill mold to the very top.
- When using molds with small indents or details, such as the Santa, Bear or Bunny mold, be sure to fill each area with the chocolate mixture to ensure full chocolate coverage.
- After removing the mold from the HOLLOW CHOCOLATIER, make sure that every part of the mold is covered with chocolate. If small spaces remain clear, shake the mold to move the chocolate into the space remaining.
- For solid candies, fill one half of the mold of your choice and freeze.
- To turn on only the lights of the unit, press the switch to "I".

CLEANING & MAINTENANCE

Please take care of your HOLLOW CHOCOLATIER by following these simple instructions and precautions.

- Disconnect from the electrical outlet by unplugging the appliance.
- Make sure the appliance is completely cool before cleaning.
- Disassemble all parts.
- Dispose of any remaining mixture by emptying into a bag or trash receptacle. It is not recommended that you pour the leftover mixture down the sink.
- Hand wash pot, molds and any utensils used in warm, soapy water with a non-abrasive cloth.
- Dry parts thoroughly with a soft, non-abrasive cloth.
- Wipe the heated base with a dry, non-abrasive cloth. Make sure that no water gets inside of the Heated Base.
- DO NOT put any parts in a dishwasher.
- NEVER immerse heated base or cord in water.

RECIPES

Creating delightful candies for yourself or family and friends has never been easier or more entertaining! With the HOLLOW CHOCOLATIER, you can make, fill and wrap chocolate candies in shapes for all occasions.

The chocolate-melting pot holds up to 16 ounces (2 cups) of melted chocolate. Try using different varieties in either chip or block form:

- 16 oz. Milk, Dark, Semisweet or White Chocolate Chips
- 16 oz. Belgian Milk Chocolate
- 16 oz. Peanut Butter Chips
- 16 oz. Butterscotch Chips

Use your favorite:

frostings

creams

liqueurs

or jellies

to fill the hollow candies. You can also use different combinations of fillings to make new and exciting flavors, and don't forget the included foil wraps that make anything more festive!

RETURNS & WARRANTY

SHOULD YOUR UNIT NOT WORK OR IF DAMAGED WHEN YOU FIRST TAKE IT OUT OF THE BOX, PLEASE RETURN IT TO THE PLACE OF PURCHASE IMMEDIATELY.

HOLLOW CHOCOLATIER/HCC360

Should you have any questions, please contact us via email or at the customer service number listed below between the hours of 8:00 AM and 5:00 PM, Monday through Friday, Central Standard Time.

Distributed by:

Nostalgia Products Group LLC
1471 Partnership Dr.
Green Bay, WI 54304-5685
Customer Service
Phone: (920) 347-9122
Web: www.nostalgielectrics.com

Customer Service Inquiry

To submit a Customer Service inquiry, go to www.nostalgielectrics.com and fill out the Customer Service Inquiry form and click the Submit button.

A representative will contact you as soon as possible.

This appliance is designed and built to provide many years of satisfactory performance under normal household use. The distributor pledges to the original owner that should there be any defects in material or workmanship during the first 90 days of purchase, we will repair or replace the unit at our option. Our pledge does not apply to damages caused by shipping, mishandling or unit being dropped. A product deemed defective either from manufacturing or being mishandled is up to the distributor's discretion. In order to obtain service under this warranty, please contact Nostalgia Products Group, LLC at the telephone number listed above or by filling out the Customer Service Inquiry Form located at www.nostalgielectrics.com. This warranty does not apply to re-manufactured merchandise.

Please read these instructions carefully. Failure to comply with these instructions, damages caused by improper replacement parts, abuse or misuse will void this pledge to you and is being made in place of all other expressed warranties.

For more information, visit us online at www.nostalgielectrics.com.

Like us on Facebook at www.facebook.com/NostalgiaElectrics.

Follow our boards on Pinterest at www.pinterest.com/nostalgielectrx.

Tweet along with us on Twitter at www.twitter.com/NostalgiaElctrx.

